



DUAL 4 FOOT AND 12 FOOT GATE DIMENSIONS WITH SWING LATCH

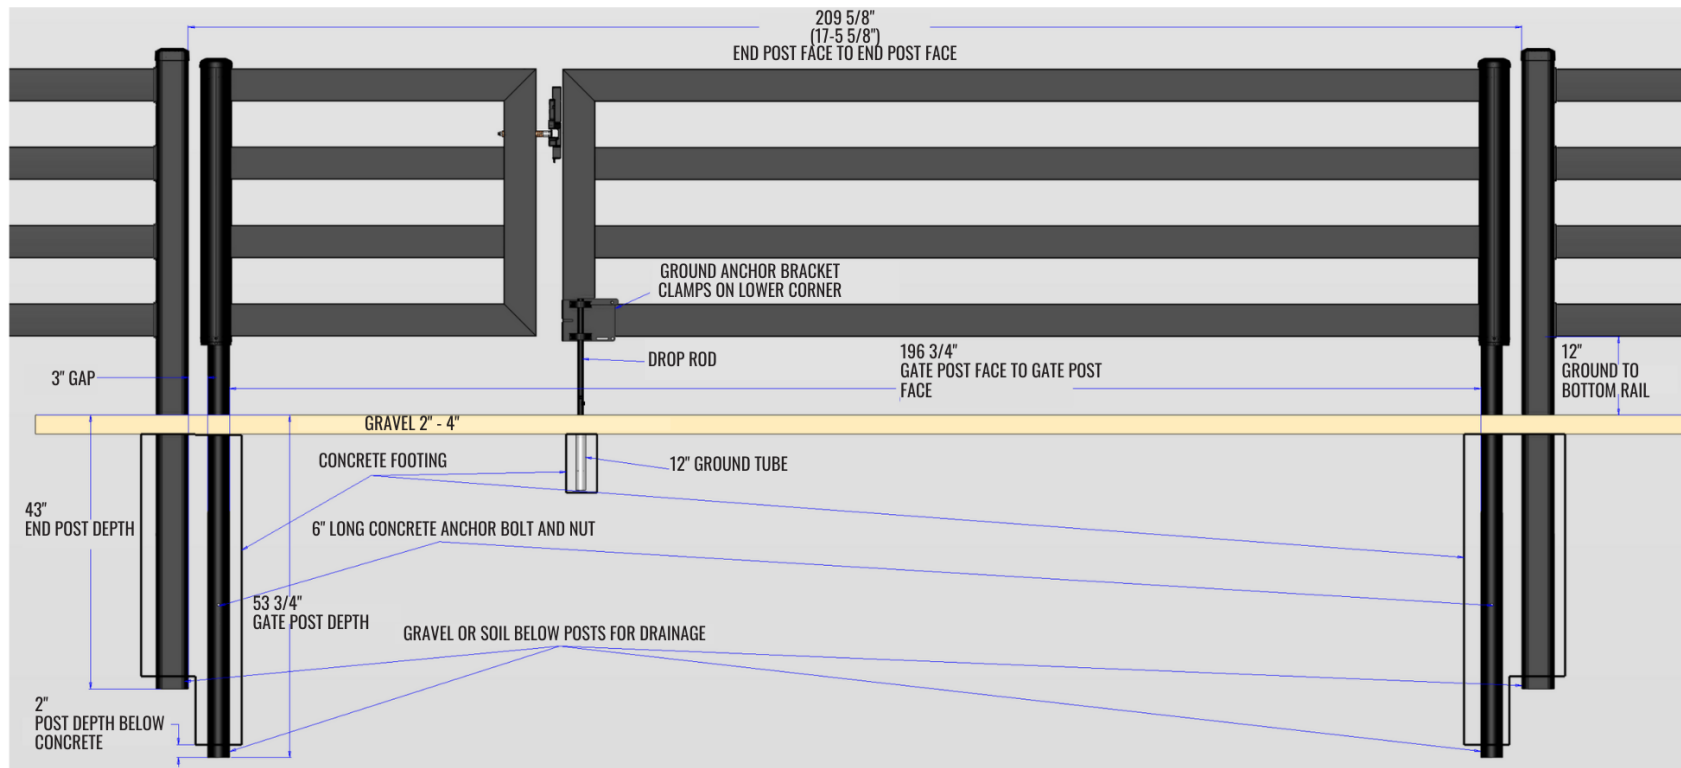


- Gate Post Face to Gate Post Face Dimensions are reference only and rounded to the nearest 1/4".
- End Post Face to End Post Face dimensions are exact and must be within the nearest 1/8".
- End Post Face to Gate Post Face is exactly 3".
- Reference Buckley Fence "Steel Board Gate Installation Instructions" for setting the End Post Face to Gate Post Face spacing.
- The nominal opening between Gate faces for Dual Gates is 4 1/4" when a swing latch is used. When not using a Latch, the gap between gate faces is 3 1/4" and 1" should be removed from the End Post Face to End Post Face Spacing.

DUAL 4 FOOT & SECTION GATE DIMENSIONS WITH SWING LATCH

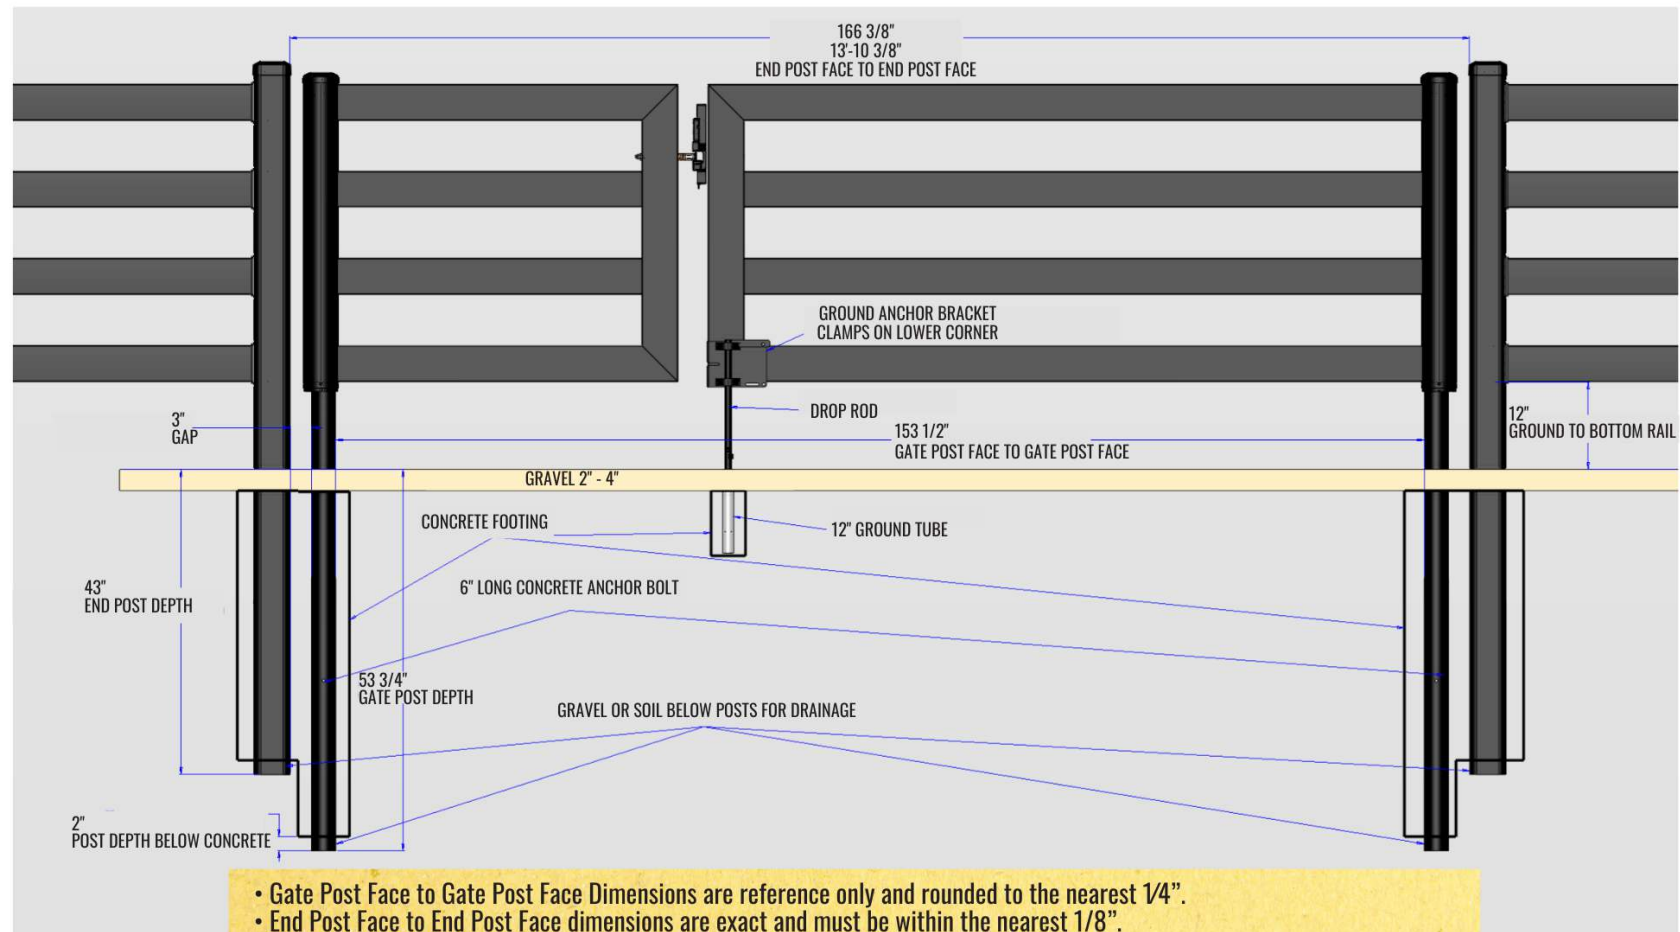


- Gate Post Face to Gate Post Face Dimensions are reference only and rounded to the nearest $\frac{1}{4}$ ".
- End Post Face to End Post Face dimensions are exact and must be within the nearest $\frac{1}{8}$ ".
- End Post Face to Gate Post Face is exactly 3".
- Reference Buckley Fence "Steel Board Gate Installation Instructions" for setting the End Post Face to Gate Post Face spacing.
- The nominal opening between Gate faces for Dual Gates is 4 $\frac{1}{4}$ " when a swing latch is used. When not using a Latch, the gap between gate faces is 3 $\frac{1}{4}$ " and 1" should be removed from the End Post Face to End Post Face Spacing.

DUAL 4 FOOT GATE DIMENSIONS WITH SWING LATCH

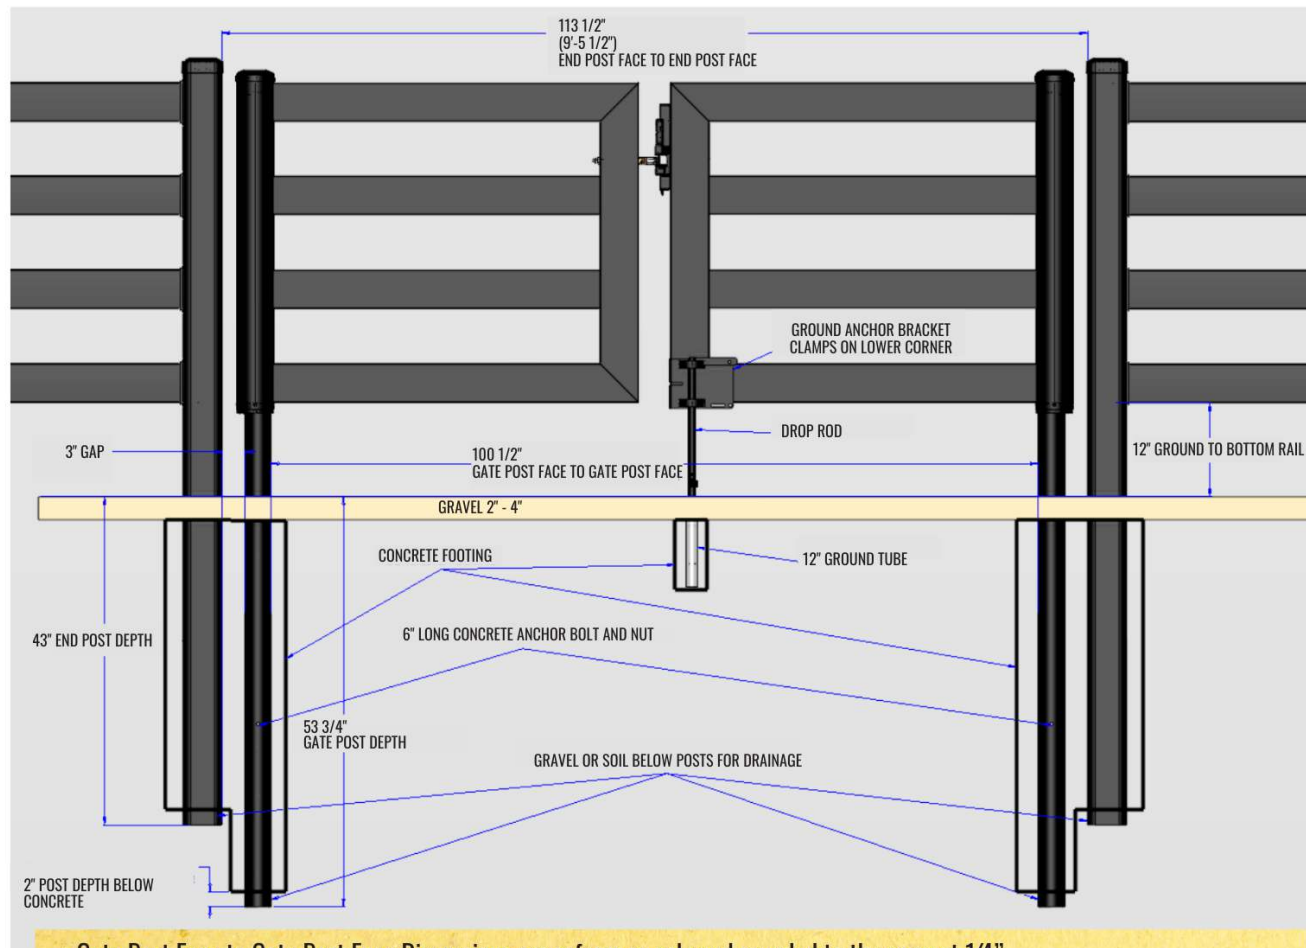


- Gate Post Face to Gate Post Face Dimensions are reference only and rounded to the nearest 1/4".
- End Post Face to End Post Face dimensions are exact and must be within the nearest 1/8".
- End Post Face to Gate Post Face is exactly 3".
- Reference Buckley Fence "Steel Board Gate Installation Instructions" for setting the End Post Face to Gate Post Face spacing.
- The nominal opening between Gate faces for Dual Gates is 4 1/4" when a swing latch is used. When not using a Latch, the gap between gate faces is 3 1/4" and 1" should be removed from the End Post Face to End Post Face Spacing.

DUAL 12 FOOT GATE DIMENSIONS WITH SWING LATCH

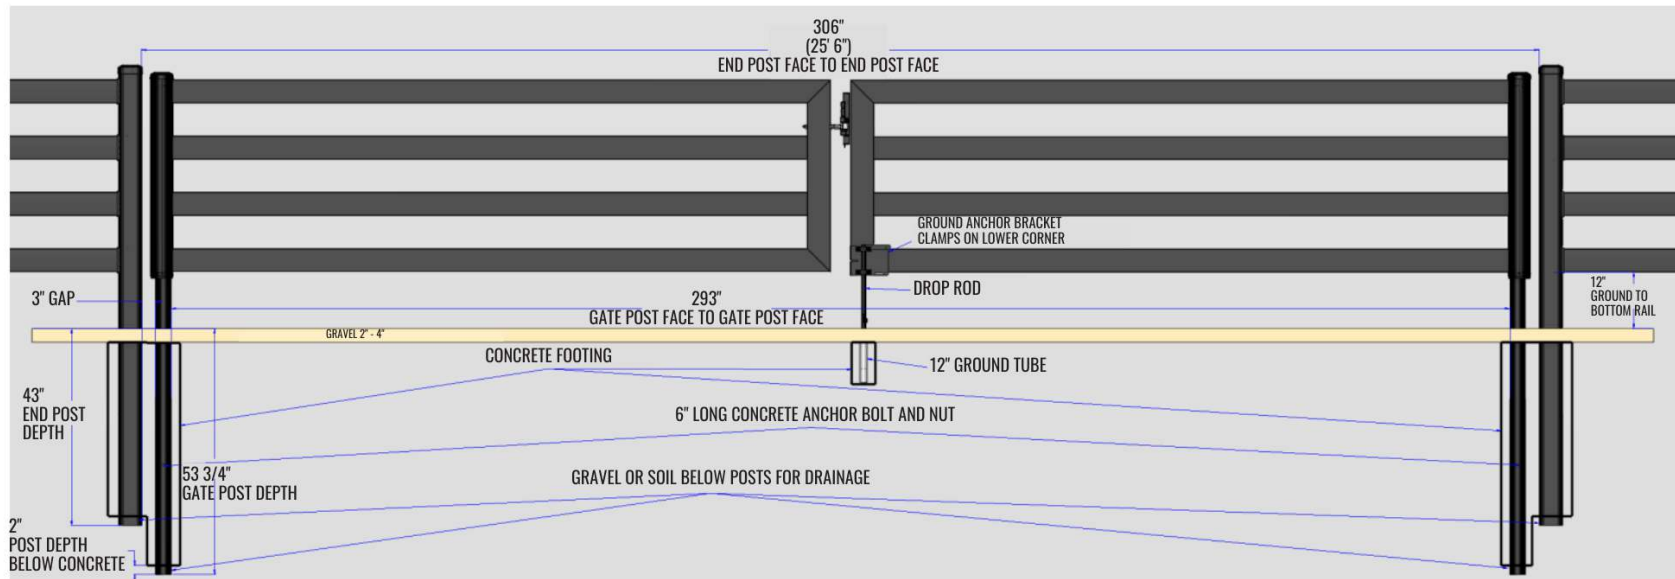


- Gate Post Face to Gate Post Face Dimensions are reference only and rounded to the nearest 1/4".
- End Post Face to End Post Face dimensions are exact and must be within the nearest 1/8".
- End Post Face to Gate Post Face is exactly 3".
- Reference Buckley Fence "Steel Board Gate Installation Instructions" for setting the End Post Face to Gate Post Face spacing.
- The nominal opening between Gate faces for Dual Gates is 4 1/4" when a swing latch is used. When not using a Latch, the gap between gate faces is 3 1/4" and 1" should be removed from the End Post Face to End Post Face Spacing.

DUAL SECTION AND 12 FOOT GATE DIMENSIONS WITH SWING LATCH

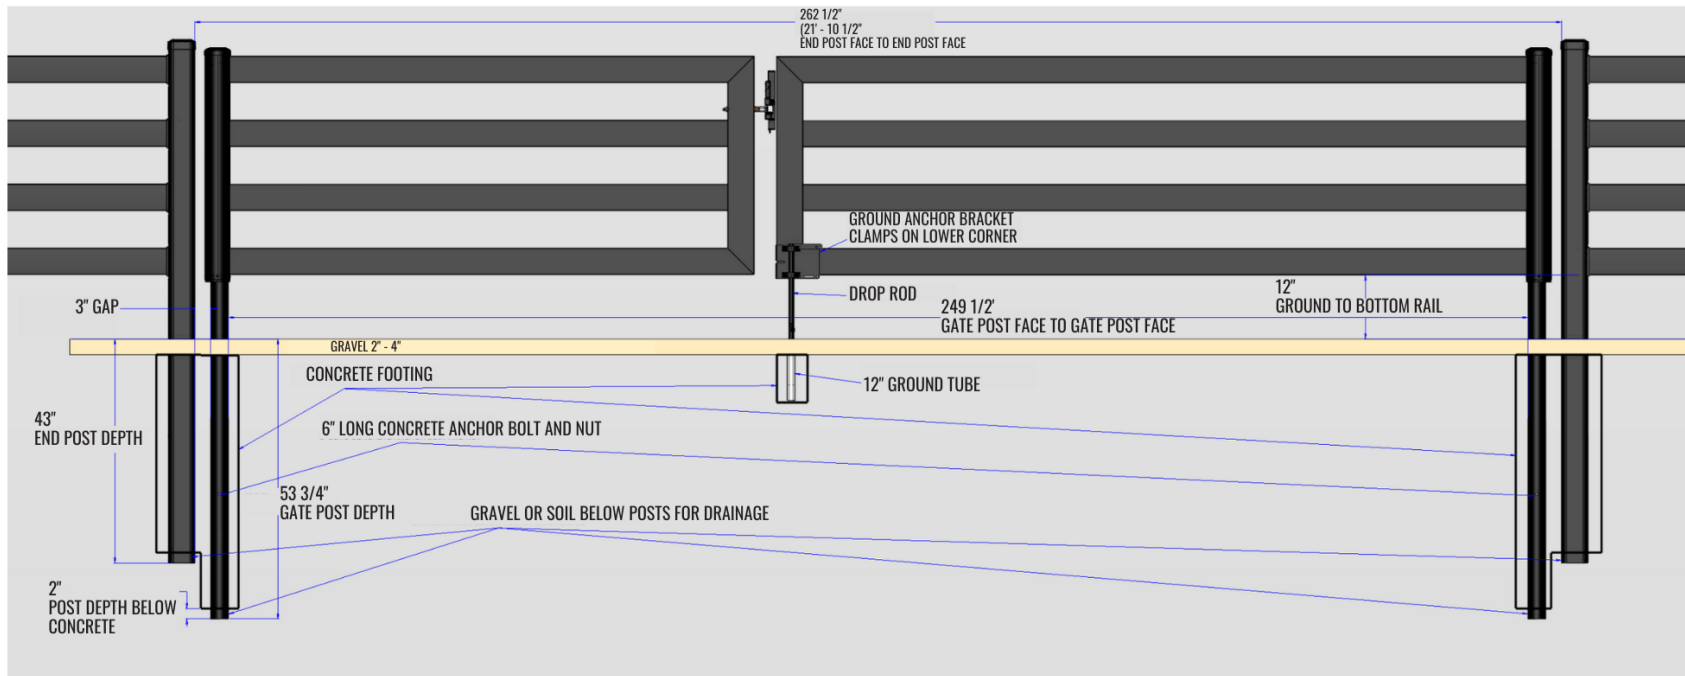

- Gate Post Face to Gate Post Face Dimensions are reference only and rounded to the nearest 1/4".
- End Post Face to End Post Face dimensions are exact and must be within the nearest 1/8".
- End Post Face to Gate Post Face is exactly 3".
- Reference Buckley Fence "Steel Board Gate Installation Instructions" for setting the End Post Face to Gate Post Face spacing.
- The nominal opening between Gate faces for Dual Gates is 4 1/4" when a swing latch is used. When not using a Latch, the gap between gate faces is 3 1/4" and 1" should be removed from the End Post Face to End Post Face Spacing.

DUAL SECTION DIMENSIONS WITH SWING LATCH

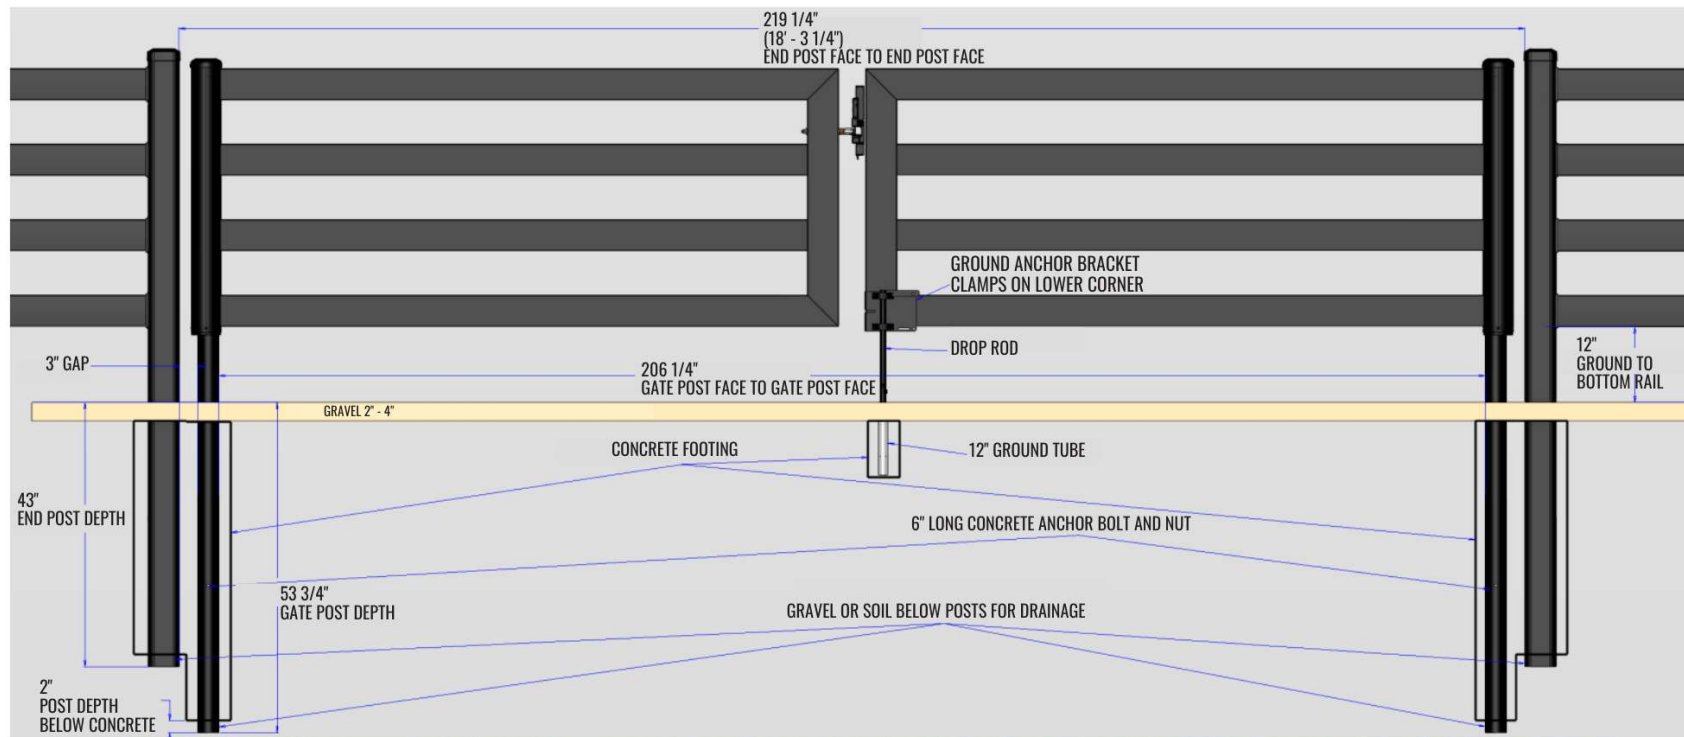

- Gate Post Face to Gate Post Face Dimensions are reference only and rounded to the nearest 1/4".
- End Post Face to End Post Face dimensions are exact and must be within the nearest 1/8".
- End Post Face to Gate Post Face is exactly 3".
- Reference Buckley Fence "Steel Board Gate Installation Instructions" for setting the End Post Face to Gate Post Face spacing.
- The nominal opening between Gate faces for Dual Gates is 4 1/4" when a swing latch is used. When not using a Latch, the gap between gate faces is 3 1/4" and 1" should be removed from the End Post Face to End Post Face Spacing.