


FOR INSTALLING BUCKLEY FENCE FOOTING BRACKETS ONTO BUCKLEY FENCE LINE AND END POSTS

This document will cover the step-by-step process of installing the footings board mounting bracket, supplied by Buckley Fence, onto a Buckley Fence Line and End Post.

Determine what level above the top of the footing's material will be at and string a line down the fence line. Measure 4" above the string mark the post. Measure 2" below the string and mark the post. These lines will be where you will drill into the post to mount the bracket.

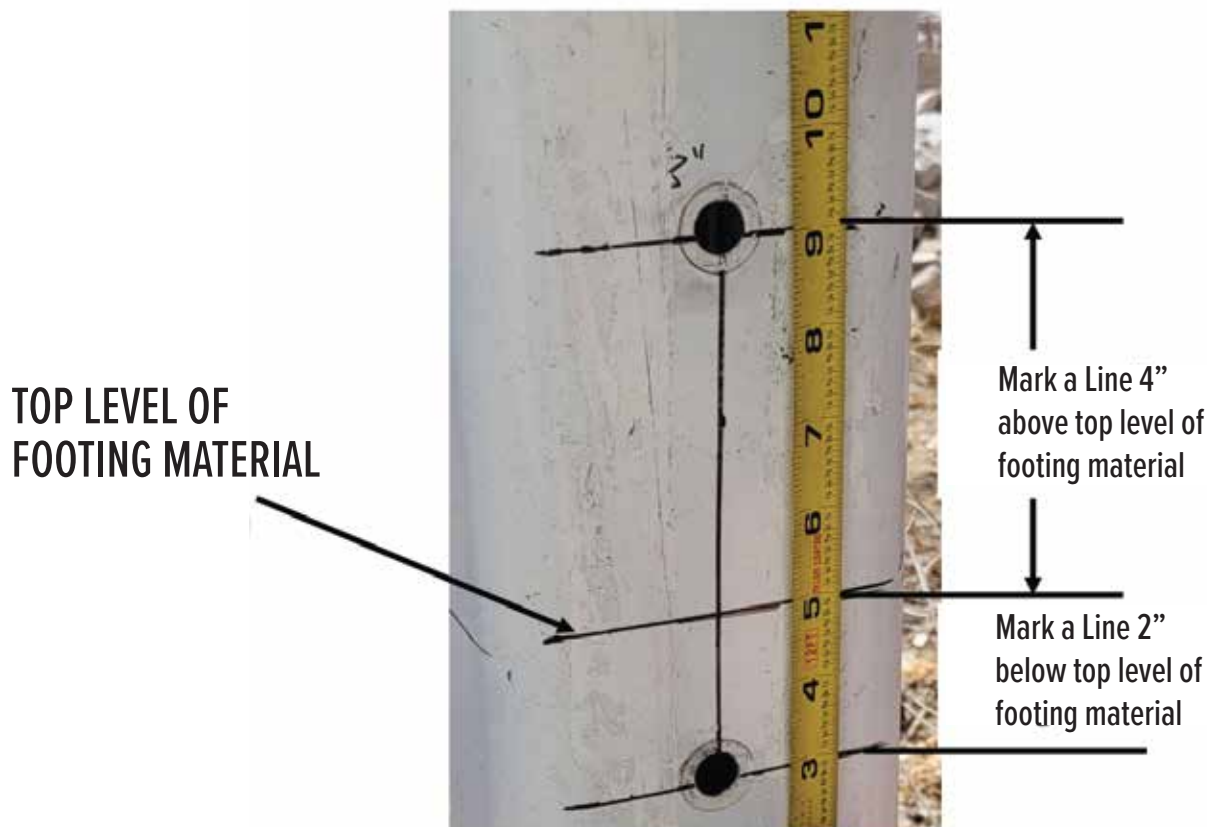

Drill one 1/2" hole on each marked line(4" above top level of footing material and 2" below top level of footing material), it is recommended that you use a step drill. Each hole should be drilled approximately on center of the post face (2 9/16" from the edge of the post) it is okay if the drill walks off the line you measured as the mounting holes are slotted to provide minor adjustments. Once the holes are drilled, insert the rubber well nuts as shown in the picture below.



Place the mounting bracket over the well nuts and inset one of the screws into the top slotted hole and screw into the well nut, do not tighten down fully.



Insert the second screw into the bottom slot on the mounting bracket and tighten fully, then tighten fully the top screw.



Insert rails into bracket from the top, two rails per side. End posts will only use one side of the bracket.

Contact Buckley Fence with any questions.

Buckley Fence, LLC

877-306-4024

sales@buckleyfence.com



BUCKLEY
FENCE